

Product Overview Noise Sources



Virginia Diodes, Inc.

979 2nd St SE, Suite 309 Charlottesville, VA 22902-6172 (USA)

Tel: 434.297.3257 Fax: 434.297.3258 www.vadiodes.com

Contents

General Operating Practices and Recommendations			
General Guidelines	3		
Safety Guidelines	3		
Waveguide Test Port Care	3		
General Operating Practices and Recommendations	3		
Noise Source Product Specifications	4		
Noise Source Performance	5		
Noise Source Drawing	9		
FNR File Format	.10		

General Operating Practices and Recommendations

General Guidelines

- Read all instructions and information in this manual before connecting the product to external equipment.
- Operational procedures must be followed for proper function. If you have questions, contact VDI before operating the product.
- VDI assumes the customer is familiar with microwave, millimeter wave and VDI products in general. The user is expected to understand all safety guidelines, health hazards and general advisories that may exist and are associated with the use of this product. VDI is not responsible for any human hazards that may exist or may occur while using this device.

Safety Guidelines

- VDI accepts no liability for damage or injury resulting from or caused by:
 - o Improper use, disassembly or use for other purposes than for which the product was designed.
 - Use outside common safety, health or general advisories pertaining to microwave, millimeter-wave and VDI products.
 - o Repairs carried out by persons other than VDI or its assigned agents.
- Use of any attachments and accessories not authorized by VDI or that do not meet VDI's specifications may void the product's limited warranty and could pose a hazard to the operator or cause lasting damage to the device.
- Applying liquids (other than the TexWipe wipes / cloths used for cleaning) can cause lasting damage to the product.

Waveguide Test Port Care

- Inspect waveguide flanges for damage or debris prior to making connections.
- Torque waveguide screws in the range of 20-50cNm when making waveguide flange connections. Greater torque can damage the interface.
- Making a connection with metal debris between the waveguide flanges can damage the waveguide interface and prevent repeatable connections.
- If debris is present, clean the flange with pre-dampened TexWipe wipes or swabs (e.g. Part Number TX1065).
- Cover test ports with dust caps when the system is idle.

General Operating Practices and Recommendations

- With the +28V TURNED OFF, connect the VDI Noise Source to the +28V Port on the Spectrum Analyzer or Noise Figure Analyzer. Connecting a live +28V to the VDI Noise Source may cause large turn-on transients.
- VDI does not recommend the use of liquid or paste for either thermal grounding of VDI components or for locking screws. Liquids /
 pastes wicking into the VDI component will void the product's warranty and can damage the internal device and worsen
 performance.
- Check with VDI before any use is attempted beyond those described in this manual or if it may exceed commonly accepted standards of practice.







Noise Source Product Specifications

VDI Noise Sources offer high Excessive Noise Ratio (ENR) performance across full waveguide bands up to 330 GHz. VDI Noise Sources include waveguide isolators to improve the match between the NS and the DUT and are configured with a +28V voltage bias port, compatible with many spectrum analyzers or noise figure analyzers. Additional noise sources are under development. Contact VDI for more information.

	Frequency Band (GHz)				Output Return Loss
Part Number	Start	Stop	Waveguide Flange	ENR (dB, typ.)	(dB, typ.)
WR15NS	50	75	WR-15	17	18
WR12NS	60	90	WR-12	15	17
WR10NS	75	110	WR-10	15	18
WR8.0NS	90	140	WR-8.0	10	19
WR6.5NS	110	170	WR-6.5	10	17
WR5.1NS	140	220	WR-5.1	8.5	18
WR4.3NS	170	260	WR-4.3	5.5	18
WR3.4NS	220	330	WR-3.4	5.5	16
WR2.8NS	260	400	WM-710(WR-2.8)	Contact VDI	12


General Specifications for VDI Noise Sources				
Description	Specification			
DC Bias Voltage (V)	+28 ± 1			
Current Draw (mA)	<10			
DC Bias Voltage AM Modulation Rate (ON/OFF)	1kHz (typ.)			
Bias Voltage Connector	2.92mm(f)*			
Maximum Weight (lbs.)	~0.1			
Output Flange	UG-387/U-M**			
Operating Temperature (Typical / Recommended)	25°C / 20-30°C			


^{*}VDI to include a SMA(m) to BNC(f) adapter.




^{**}VDI Noise Sources include Compact Isolators from MHC. MHC Isolators have slightly rotated output waveguide. The impact of the rotated waveguide is often negligible. Click here for more information on the rotated waveguide.


Noise Source Performance

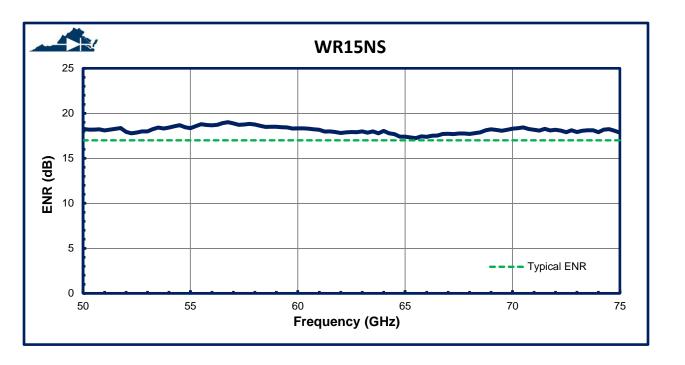

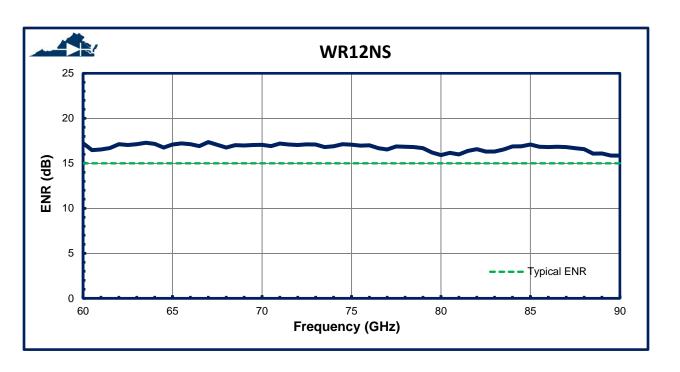





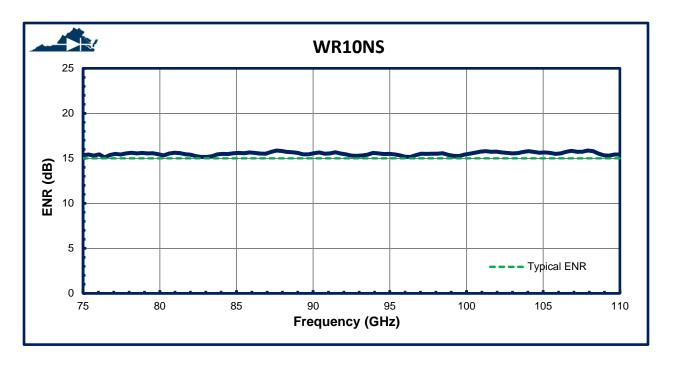


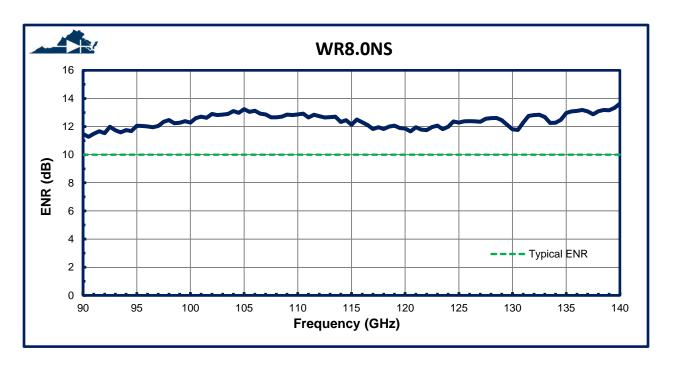




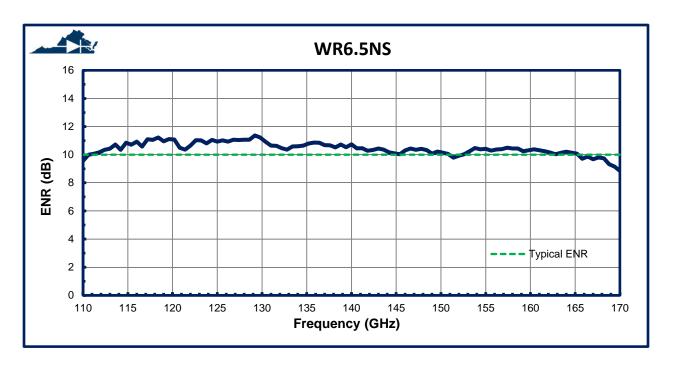


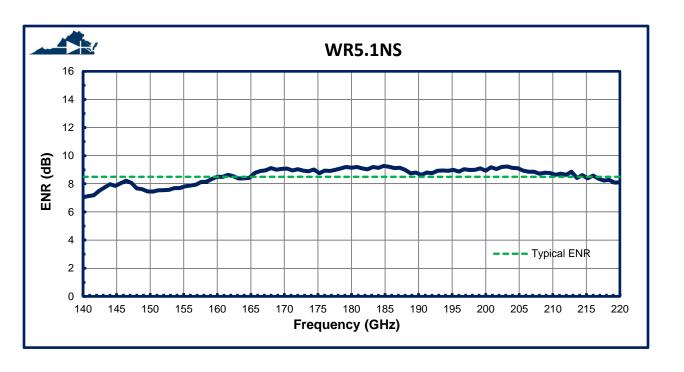

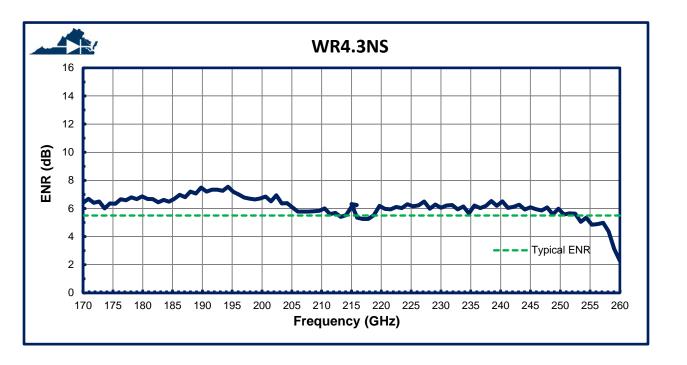

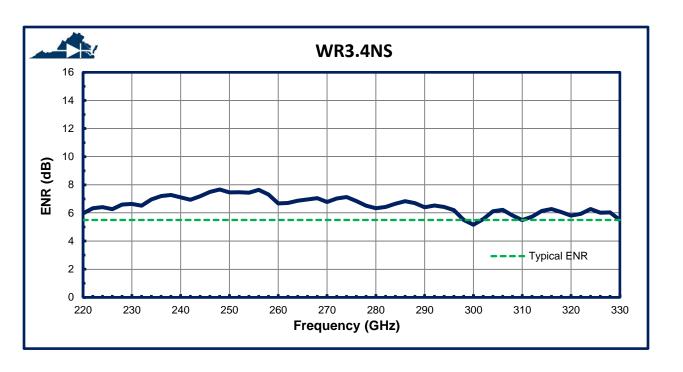

Noise Source Drawing

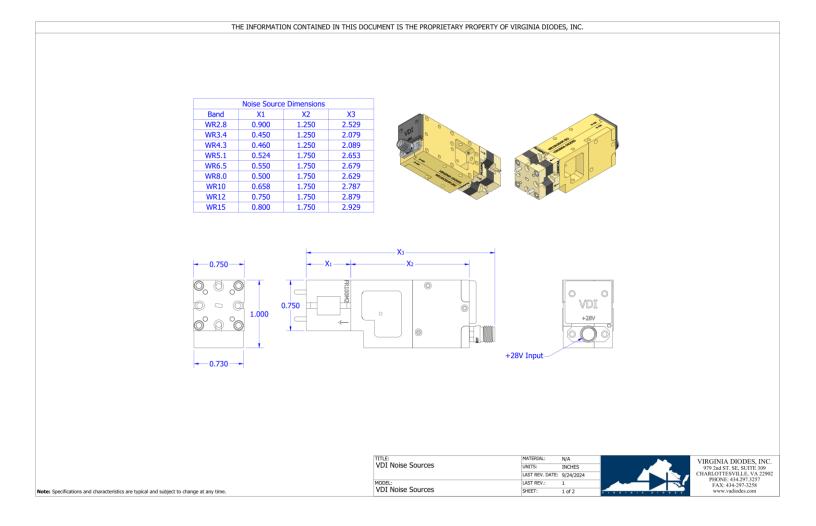

ENR File Format

Every VDI Noise Source will ship with an ENR file that is compatible for use on a Keysight Spectrum Analyzer with Noise Figure Application. A sample ENR file is shown below. Comments shown in red. Red text is not included on the .csv file.

[Filetype ENR],
[Version A.27.05], Instrument (Spectrum Analyzer) Software Revision Number*
[Serialnumber WR6.5X6SHM-IR1 1-05], Noise Source Serial Number
[Model WR6.5NS], Noise Source Model Number
1.09995E+11,11.02815447
1.10995E+11,11.17974241
1.11995E+11,11.91899908
1.12995E+11,11.08859996
1.13995E+11,10.90244843
1.14995E+11,11.08731449

*Software Revision Number on ENR files provided by VDI will default to A.27.05. Software Revision Number does not need to be modified to load onto user's Keysight Spectrum Analyzer.

